

# CHAMBERLAIN®

## INTRODUCTION

For use with Security+ 2.0™ garage door openers that have a yellow "Learn" button. The wireless control panel can be used to as a secondary device to open and close your garage door, and to turn on and off your garage door opener lights.

## FEATURES

### PUSH BAR

Press the push bar to open and close the garage door. When the push bar is pressed, the LED behind the push bar will blink when transmitting a signal. To conserve battery power, the LED will turn off when not in use. If the LED does not light when the push bar is pressed, the battery power is low. Replace the battery.

### LIGHT BUTTON

Press the Light button to turn the garage door opener lights on or off. When the lights are turned on they will stay on until the Light button is pressed again, or until the garage door opener is activated. Once the garage door opener is activated the lights will turn off after the specified period of time (the factory setting is 4-1/2 minutes). The Light button will not control the lights when the door is in motion.

## PROGRAMMING THE WIRELESS CONTROL PANEL

Choose an option below to program the wireless door control.

### Option A

#### If programming with a Garage Door Opener "Learn" Button

1. Press and release the "Learn" button on the garage door opener.
2. Within 30 seconds, press and hold the push bar on the wireless control panel.
3. Release the button when the garage door opener light blinks. If light bulbs are not installed, two clicks will be heard. Proceed to *Test*.

### Option B


#### If programming with a Premium Motion Detecting or Multi-Function Control Panel

1. Press and release the "Learn" button. The command LED will blink.
2. Press and release the "Learn" button again. The command LED blinks again.
3. Within 30 seconds, press and hold the push bar on the wireless control panel.
4. Release the button after the garage door opener lights blink or two clicks are heard. Proceed to *Test*.

### Option C

#### If programming with a Smart Control Panel®

Using the navigation button:

1. Press the navigation button below "MENU" and proceed to "PROGRAM".
2. Select "REMOTE" then press  to continue.
3. Within 30 seconds, press and hold the push bar on the wireless control panel.
4. Release the button after the garage door opener lights blink or two clicks are heard. Proceed to *Test*.

## TEST THE WIRELESS CONTROL PANEL

To test, press the push bar on the wireless control panel. The garage door will open or close. Next, press the light button on the wireless control panel. The garage door opener lights should turn on or off. If not repeat the programming steps.

 
 
 
**NOTE:** The wireless control panel will continue to activate the garage door opener if a wired control panel has been placed into Lock mode.

## SECURITY+ 2.0™ WIRELESS CONTROL PANEL Model 041A7773-1MC

### ⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:

- Install door control within sight of garage door, out of reach of children at a minimum height of 5 feet (1.5 m), and away from ALL moving parts of door.
- NEVER permit children to operate or play with door control push buttons or remote control transmitters.
- Activate door ONLY when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep garage door in sight until completely closed. NEVER permit anyone to cross path of closing garage door.

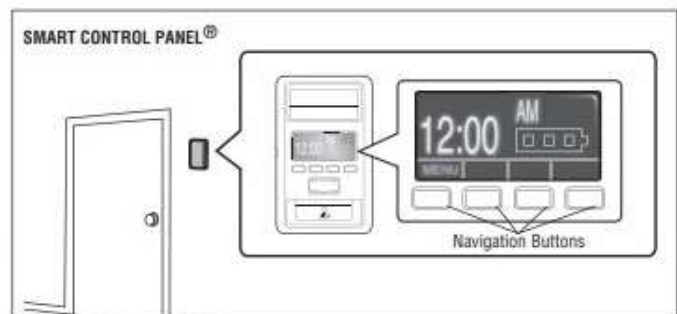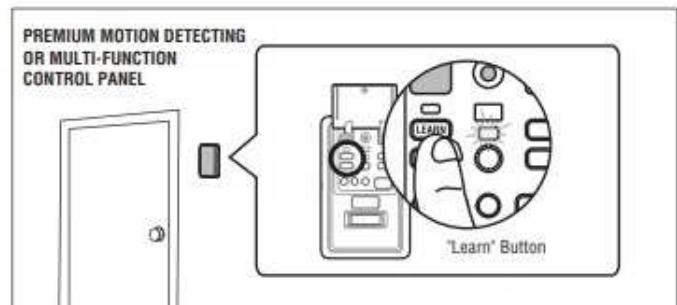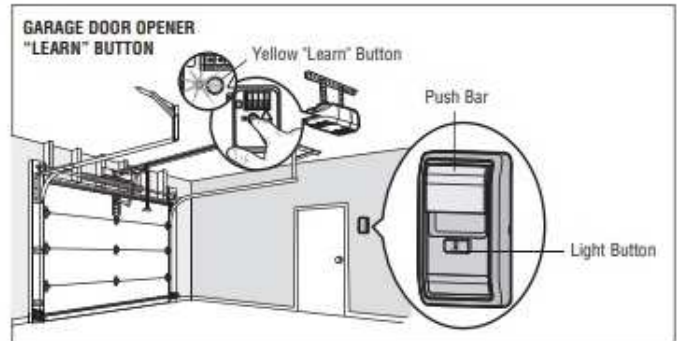

**TO ERASE ALL CODES FROM GARAGE DOOR OPENER MEMORY (REMOTE CONTROLS, KEYLESS ENTRIES AND WIRELESS CONTROL PANEL)**

To deactivate the accessories, first erase all codes: Press and hold the "Learn" button on the garage door opener until the learn indicator light goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control, keyless entry or wireless control panel you wish to use.



**INSTALLATION**

**NOTE:** Install the door control within sight of the garage door at a minimum height of 5 feet (1.5 m) where small children cannot reach, and away from the moving parts of the door.

1. Mark the location of the bottom mounting hole and drill a 5/32" (4 mm) hole.
2. Install the bottom screw, allowing 1/8" (3 mm) to protrude from the wall.
3. Position the bottom hole of the control panel over the screw and slide down into place.
4. Lift the push bar up and mark the top hole.
5. Remove the wireless control panel from the wall and drill a 5/32" (4 mm) hole for the top screw.
6. Position the bottom hole of the door control over the screw and slide down into place.
7. Attach the top screw and close the push bar.

**WIRELESS CONTROL PANEL BATTERY**

**⚠ WARNING**

 
To prevent possible **SERIOUS INJURY** or **DEATH**:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V2032 coin batteries.
- **DO NOT** recharge, disassemble, heat above 212°F (100°C) or incinerate.

The lithium battery should produce power for up to 5 years. To replace the battery, remove the two screws and the circuit board from the plastic housing, as shown. Insert new battery positive side up (+).

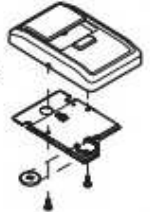

Dispose of old battery properly.

NOTICE: To comply with FCC and/or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards for Home or office use. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**Replacement Parts**

3V2032 Lithium battery ..... 10A20

**WARRANTY**

**ONE YEAR LIMITED WARRANTY**

The Chamberlain Group, Inc. warrants to the first consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.