

Testing the Transmitter

1. Standing approximately 10-30 feet away from the receiver, push the transmitter button to activate.
2. Stand in several different areas of usage to locate possible points where certain structures may interfere with the transmission.

General specification & Feature

1. Output Power : -37dBm
2. Output Frequency : 300MHz (ACCESS-300)
310MHz (ACCESS-310)
318MHz (ACCESS-318)
3. Power Supply : 12Vdc
4. Operation Indicate LED Lamp

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DISTRIBUTED BY
EXPORT MANAGEMENT SYSTEM,INC.
HAWTHORNE,CALIFORNIA

ACCESS 300(310,318)mini Transmitter

WARNING


To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

OPERATING INSTRUCTIONS:

Code Setting




1. Determine the 10 (8 or 9) digit access code obtained from the previous transmitter or the receiver. However there are over hundreds of combinations of codes possible for you to choose from.
2. Remove the two Philips head screws located on the back of the case and carefully separate the case halves to expose the circuit board and battery. (See Diagram #1)

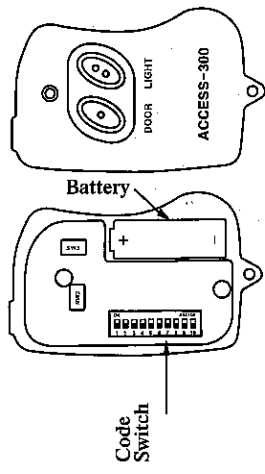

Transmitter with Top Case Removed Top Case

DIAGRAM #1

3. Using a sharp object or tool, such as a paper clip, set the new transmitter code by setting the "ON" and "OFF" switches according to the exact code setting of your previous transmitter or the receiver. (Note: The switches are in the "ON" positions when the switch is pushed toward the letter ON.) (See Diagram #2)



Code Switch
DIAGRAM #2

4. Once the codes have been set, replace the top cover, and test the system.

Note: In order to avoid duplication of your access code, the following sequences are not recommended.

- Alternating from "ON" and "OFF" or "OFF" and "ON" position.
- Setting the switch on all "ON" or all "OFF" position.
- It is important for the access code to be set exactly in the same order as the receiver for the transmitter to function properly.